

Übersicht der gängigen Pinbelegungen von Parallelport-Programmer

	AVR-ISP	Ponyprog	WinAVR	Kanda	SP12	FB-Prog	At-Prog	Hi-Prog
MOSI	5	2	9	7	8	7	8	7
MISO	4	11	11	10	11	10	11	10
SCK	3	5	2	6	2	8	2	6
RESET	2	4	3	4	3	6	3	9
GND	1	18-25	18-25	18-25	18-25	18-25	18-25	24-25
VCC ¹	extern	extern	4-8	extern	2-6	extern	extern	extern
				Brücke zwischen 2 und 12				

Quellen:

AVR-ISP: <http://www.atmel.com>
PonyProg: <http://www.lancos.com/prog.html>
WinAVR: <http://www.rowalt.de/mc/avr/progd.htm>
Kanda-Dongle: <http://www.kanda.com>
SP12: http://www.xs4all.nl/~sbolt/e-spider_prog.html
FB-Prog: <http://www.qsl.net/ba1fb/index.html>
AT-Prog: <http://www.speedy-bl.com/avr-prog.htm>
HI-Prog: <http://www.hoelscher-hi.de/hendrik/light/ressources/an011.pdf>

1 Nur für eigenständige Adapter